


Hexa

Pressure balance valve

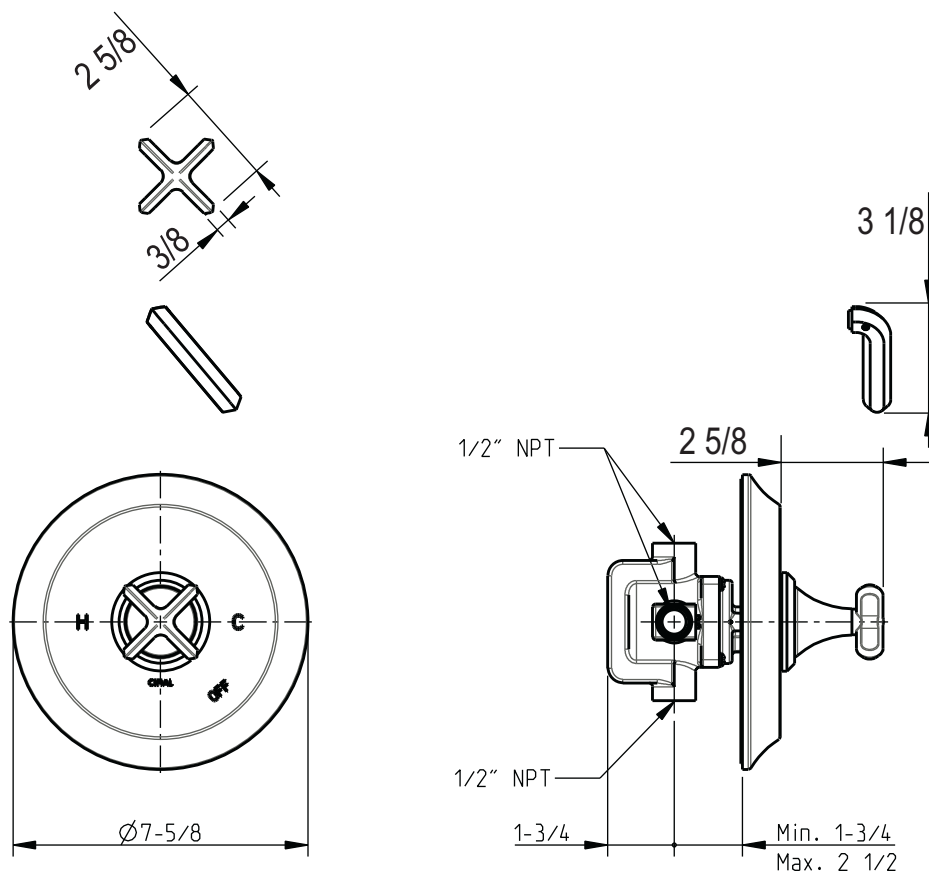

dimensions inches



www.cifial.pt | cifial@cifial.pt
cifial@cifial.es
www.cifial.co.uk | sales@cifial.co.uk
www.cifialusa.com
www.cifial.pl | cifial@cifial.pl

Extension kit: 1/2" - 36031207
3/4" - 36031208

Add cartridge # 41131000


Rough: 289 708 999 (sold seperately)

technical specifications

note:

- 1) xxx represent different finishes
- 2) (*) supplied with rough valve

code: 201 606 xxx
202 606 xxx

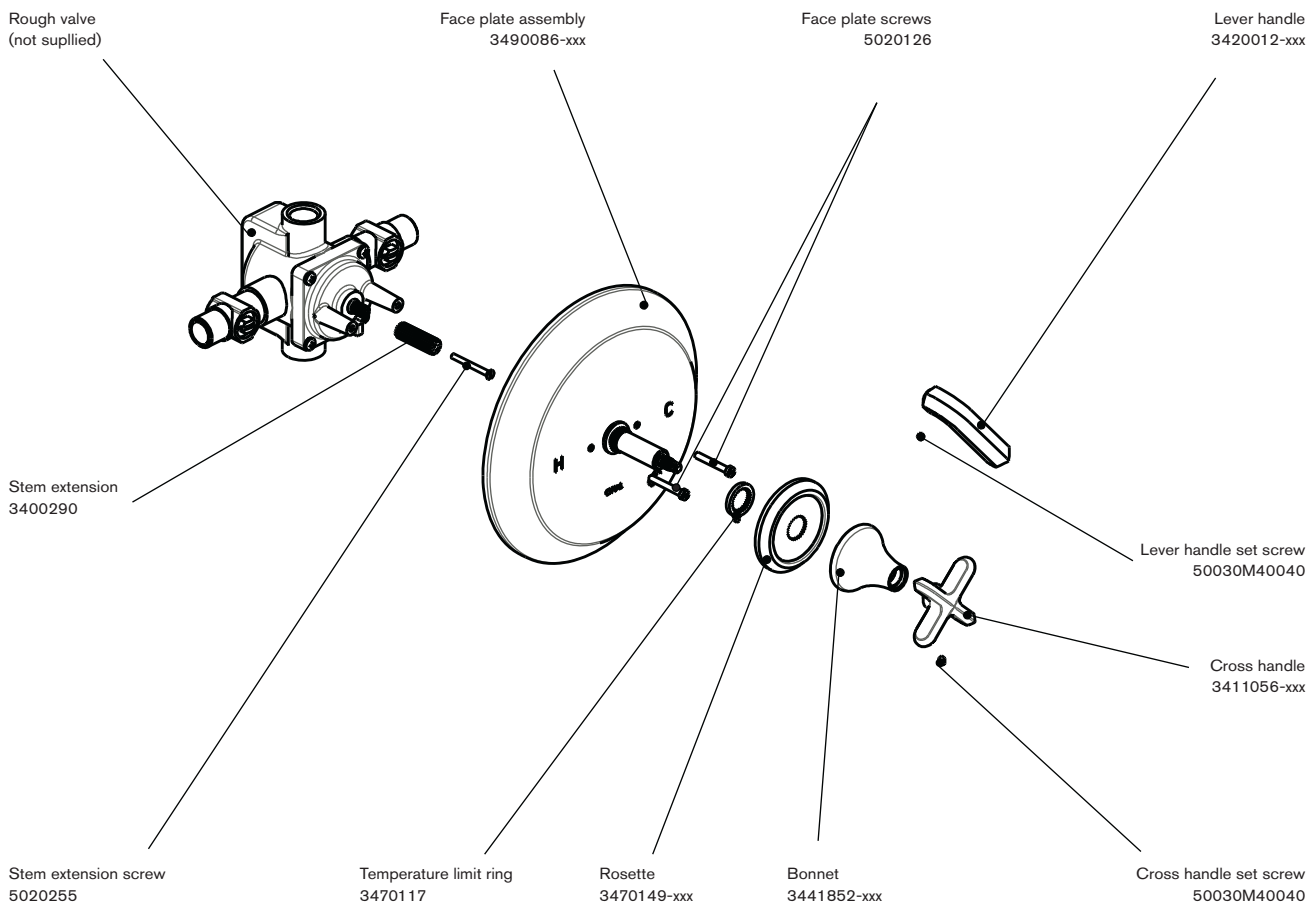

Assembly instructions

1| Place stem extension onto valve stem using screw.

2| Slide face plate into place and engage stem extension using face plate screws.

3| Set high temperature limit stop by turning handle drive shaft counter clockwise until desired maximum temperature is reached. Place temperature limit ring onto handle drive shaft with arm set next to limit stop pin. Turn handle drive shaft clockwise to shut off valve.

4| Place rosette onto handle drive shaft and align mark with off position. Thread bonnet into drive shaft. Tight cross handle with screw and place handle top.

5| Tight handle set screw into handle body.



www.cifial.pt | cifial@cifial.pt

cifial@cifial.es

www.cifial.co.uk | sales@cifial.co.uk

www.cifialusa.com

www.cifial.pl | cifial@cifial.pl