


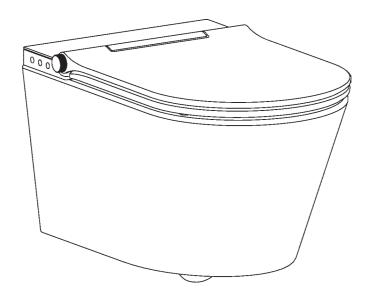

987XX047D

## Intelligent Toilet Installation Instruction











## **Bill of Material**

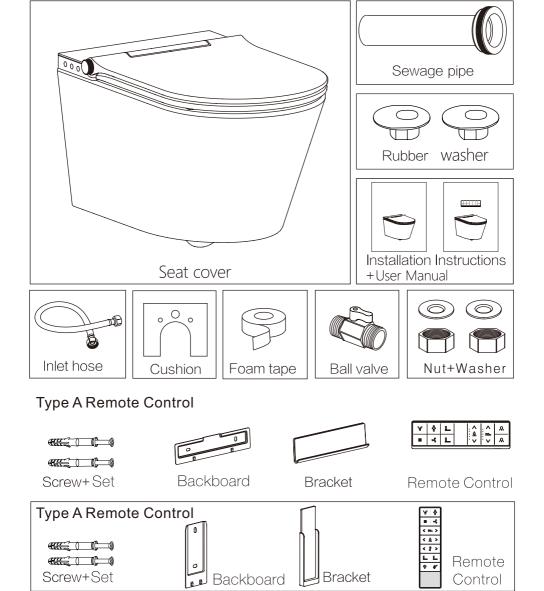


# Caution Remote Control Installation

- \* Please make sure that the toilet is installed before the remote control installation.
- \* Letter A: Represents the installation steps of the Type A remote control.
- \* Letter B: Represents the installation steps of the Type B remote control. Please install according to the type of remote control you choose.

## **Installation Tools** (not included)

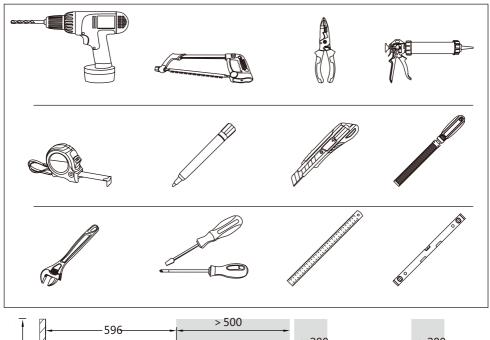


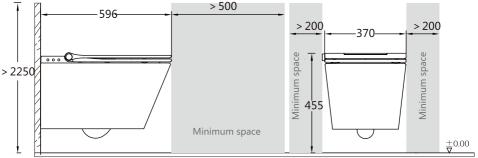

# **Installation Mode 1**


### Confirmation before installation


- 1. The toilet installation area should be equipped with inlet hose.
- 2. The toilet installation area should be equipped with power cord.
- 3 . "\*" Recommended size
- 4. The installation for ceramic part is only for wall-hung type, the floor standing version is simple, and not include in this manual.

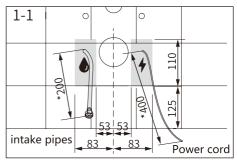






DANGER This operation shall be carried out by professionals.

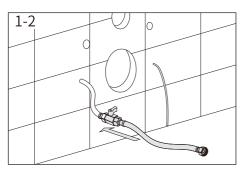


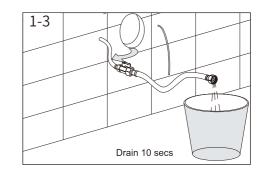


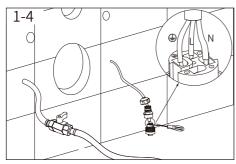


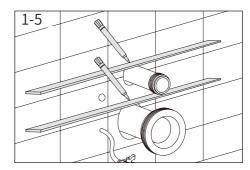


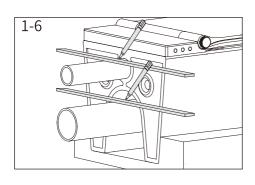


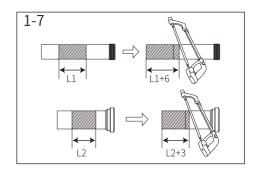


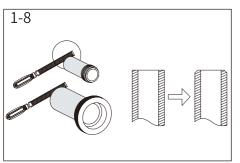


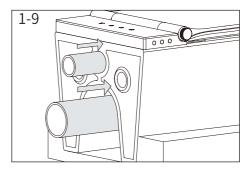


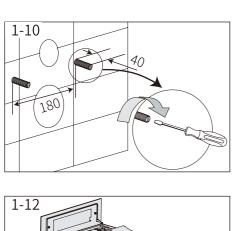


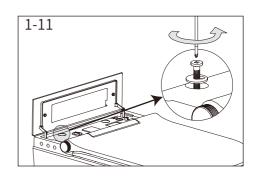


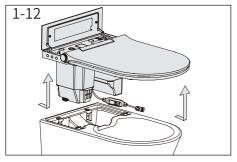


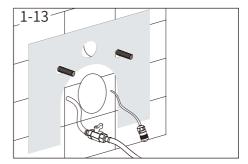


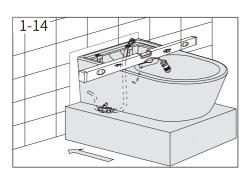


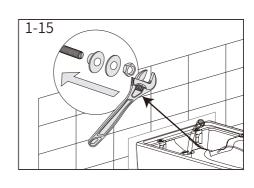


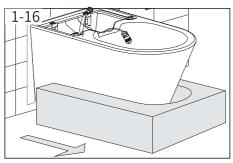


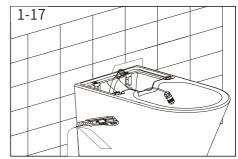


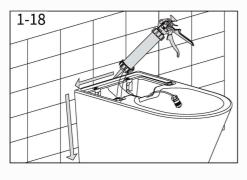


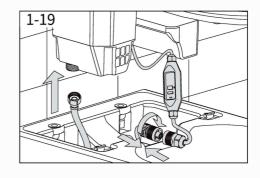


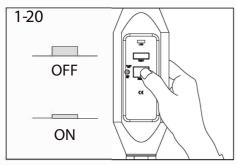

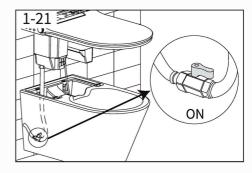

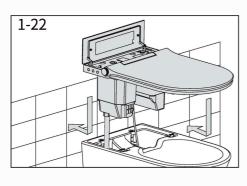

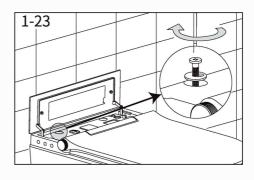


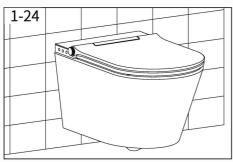



# **Remote Control Installation**

1-A


Type A remote control installation
"\*" Recommended size

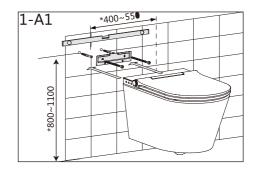


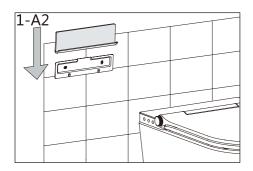


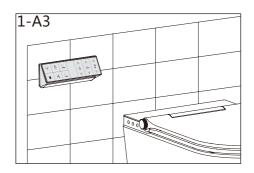

1-B
Type B remote control installation
"\*" Recommended size

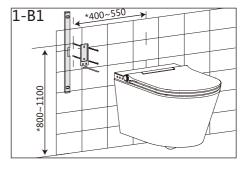

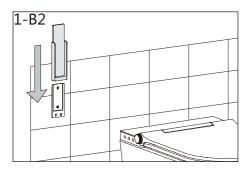


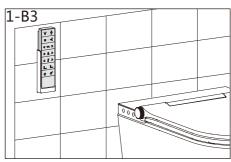

# **Installation Mode 2**

### Confirmation before installation


- 1. The toilet installation area should be equipped with angle valves.
- 2. The toilet installation area should be equipped with power sockets.
- 3. "\*" Recommended size.
- 4. The installation for ceramic part is only for wall-hung type, the floor standing version is simple, and not include in this manual.

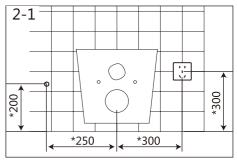






# DANGER This operation shall be carried out by professionals.




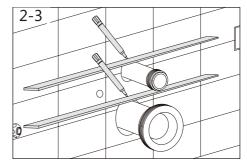


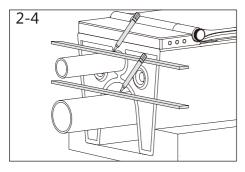


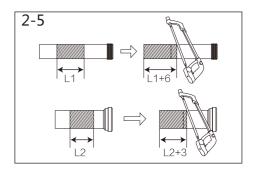


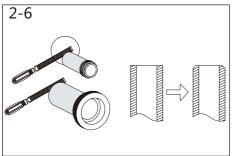


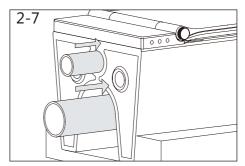


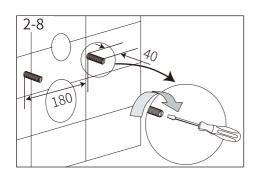


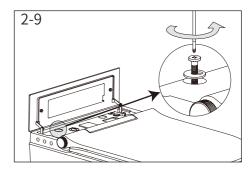


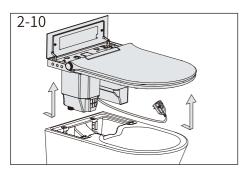

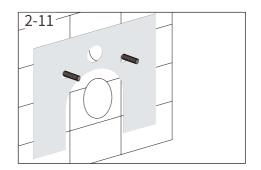


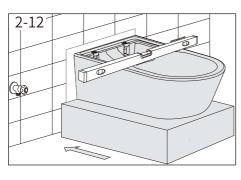


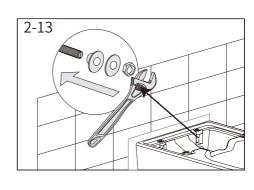


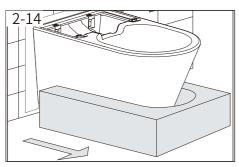





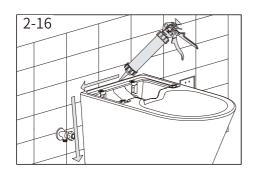

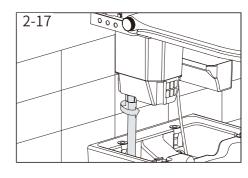

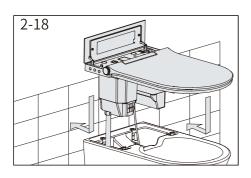

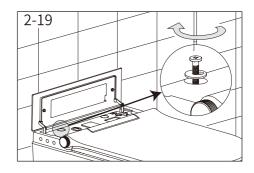


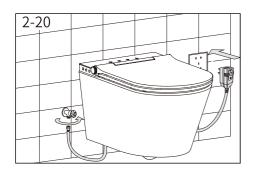



# **Remote Control Installation**

#### 2-A


TopeA remote control installation
"\*" Recommended size

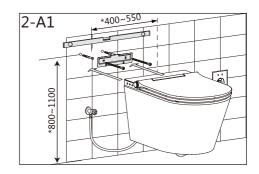


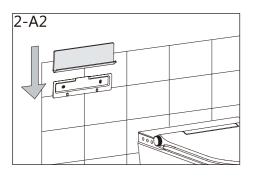


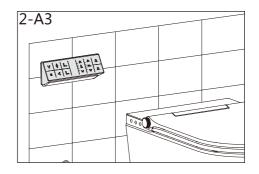

2-B
Type B remote control installation
\*\*\* Recommended size

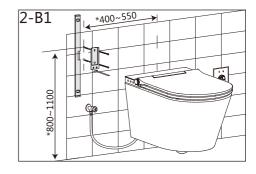

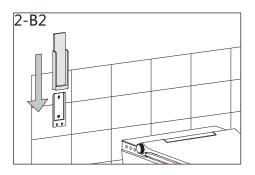

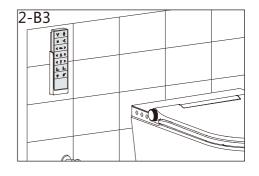

# **Important Notice**

### **Installation Instructions**

Installation instructions are used to guide the correct installation of intelligent toilet. Please read them carefully before installation.

### Icon and Identification

//>
Danger Lead to serious injury or even death.

!\ Caution Operation practice without physical injury.

# Please read the instructions in this Chapter

Target Reader and Installer Qualifications

This intelligent toilet with water pipe can only be installed by qualified plumbers. Electrical installation can only be carried out by qualified electricians.

## **Safety Instructions**



Caution Product and/or performance damage

\* Be sure to abide by the national/regional standards and local installation regulations.



🖄 Caution Product damage caused by the frozen water

\* It is forbidden to install intelligent toilets in rooms with the risk of frost. The lowest indoor temperature is not less than 4°C.



Caution Product damage caused by condensation

\* When the intelligent toilet is moved from the low temperature to the high temperature environment, please unplug the power for several hours firstly.

# Forbid to dismantle independent components



Danger Deadly electric shock danger!

- \* If the power cord is damaged, it must be replaced by the manufacturer's maintenance personnel or professionals.
- \* Appliance must be properly connected to ground.
- \* Fixed wiring must be equipped with an electric shock distance device under full-pole disconnection over-voltage level III conditions according to wiring rules.
- \* Specification of fixed wiring power supply wire is 1-2.5 square millimeters of cross section area.
- \* Ensure that the grounding end of the power supply line is 10 mm longer than that of the fire line (L) and the zero line (N).



🔼 Caution

\* The unit of length in this installation instruction is millimeter (mm). The fixed wiring must be provided with a device for full-stage disconnection under the condition of overvoltage class III according to the wiring rules and the contact distance.







CIFIAL S.A.