
# Highlands


## Wall mount kitchen with 9" spout

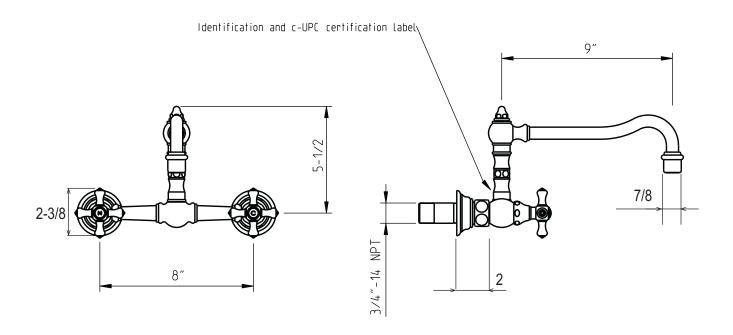

dimensions inches



www.cifial.pt | cifial@cifial.pt cifial@cifial.es www.cifial.co.uk | sales@cifial.co.uk www.cifialusa.com www.cifial.pl | cifial@cifial.pl technical specifications
note: xxx represent different finishes

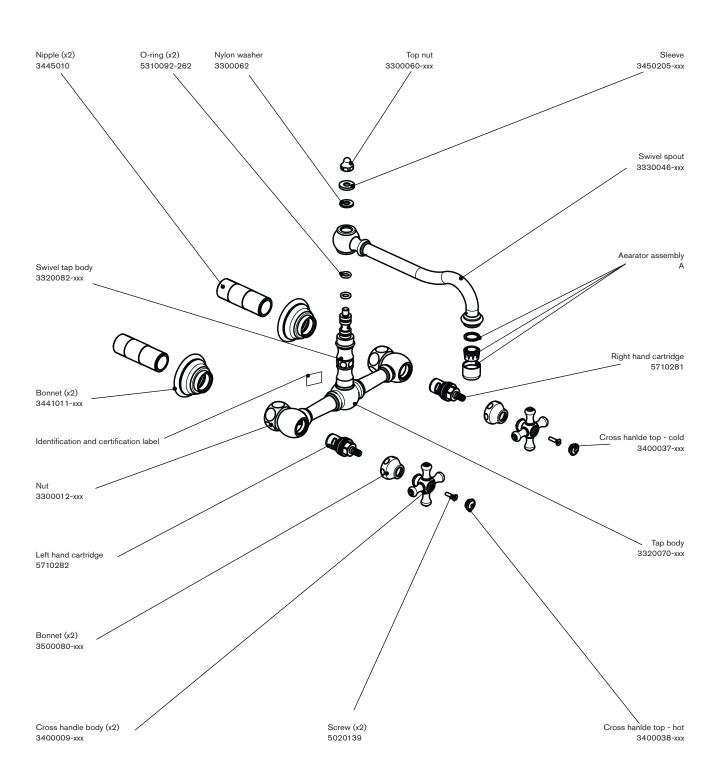



www.cifial.pt | cifial@cifial.pt cifial@cifial.es www.cifial.co.uk | sales@cifial.co.uk www.cifialusa.com www.cifial.pl | cifial@cifial.pl code: 267 260 xxx

technical specifications note: xxx represent different finishes

code: 267 260 xxx

## EN

### Installation instructions:

### Rough in:

Step 1: Estimate the finish wall thickness and refer to the rough-in depth chart using the provided 3" nipple.

Step 2: Using the two 3/4" drop ear elbow provided, rough the elbows in at the correct depth from chart (depth B). Make certain that elbows are placed exactly on 8" centers.

Step 3: Thread the nipple into the elbow\* using appropriate thread sealant. If trim is to be installed at a later time, place the plastic cap over the end of the nipple to protect threads.

#### Trim

Step 4: Thread escutcheons onto nipple and secure flush to finish wall.

Step 5: Install faucet by threading finished union nut onto nipple. Draw faucet firmly to wall making sure the nipple compresses gasket seal within the


Step 6: Remove aerator and flush line of any debris.

Step 7: Re-install aerator for operation.

#### Note:

Oty. 2-3" brass nipples included in box.
Oty. 2-3/4" FIPx3/4" SWT 90° drop ear elbows included in box.

\* Be sure to insert tapered end of nipple into drop elbow as the opposite end has straight threads needed to affix trim.

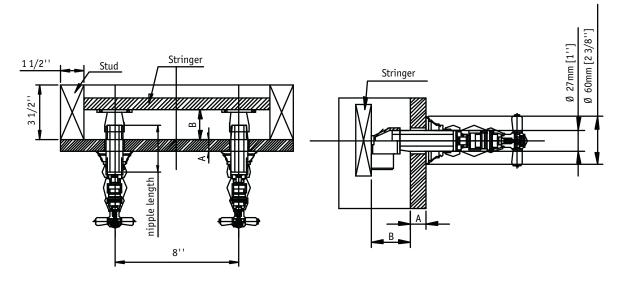

A - Finished Wall Thickness		<b>B</b> - Rough-in depth		
From	То	Provided Nipple	Alternate nipples available upon request	
		<b>3'' nipple</b> [#3445010]	<b>2 1/2'' nipple</b> [#34400117]	<b>3 1/2'' nipple</b> [#34400118]
1/8''	3/8''	2 1/2''	2''	3''
3/8''	5/8''	2 1/4''	1 3/4''	2 3/4''
5/8''	7/8''	2''	х	2 1/2''
7/8''	1 1/8''	1 3/4''	х	2 1/4''