


Hexa

Pressure balance mixing valve with integral diverter

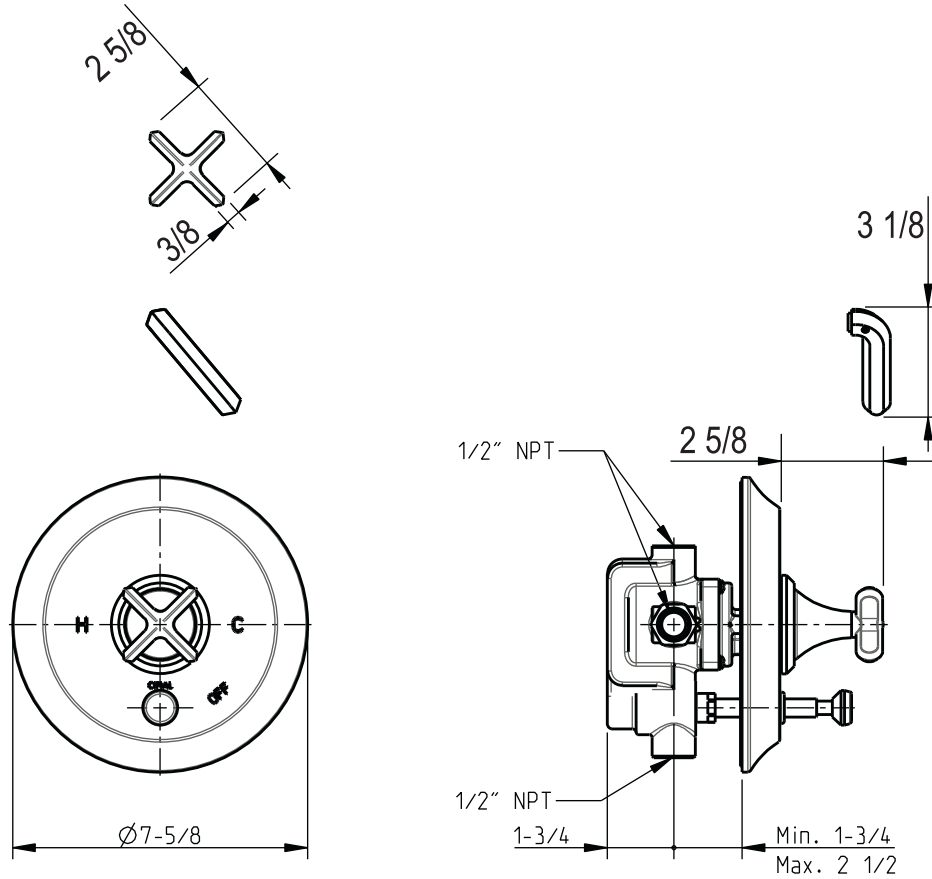

dimensions inches

CIFIAL

www.cifial.pt | cifial@cifial.pt
cifial@cifial.es
www.cifial.co.uk | sales@cifial.co.uk
www.cifialusa.com
www.cifial.pl | cifial@cifial.pl

Extension kit: 1/2" - 36031207
3/4" - 36031208

Add cartridge # 41131000


Rough: 289 710 999 (sold separately)

technical specifications

note:

- 1) xxx represent different finishes
- 2) (*) supplied with rough valve

code: 201 611 xxx
202 611 xxx

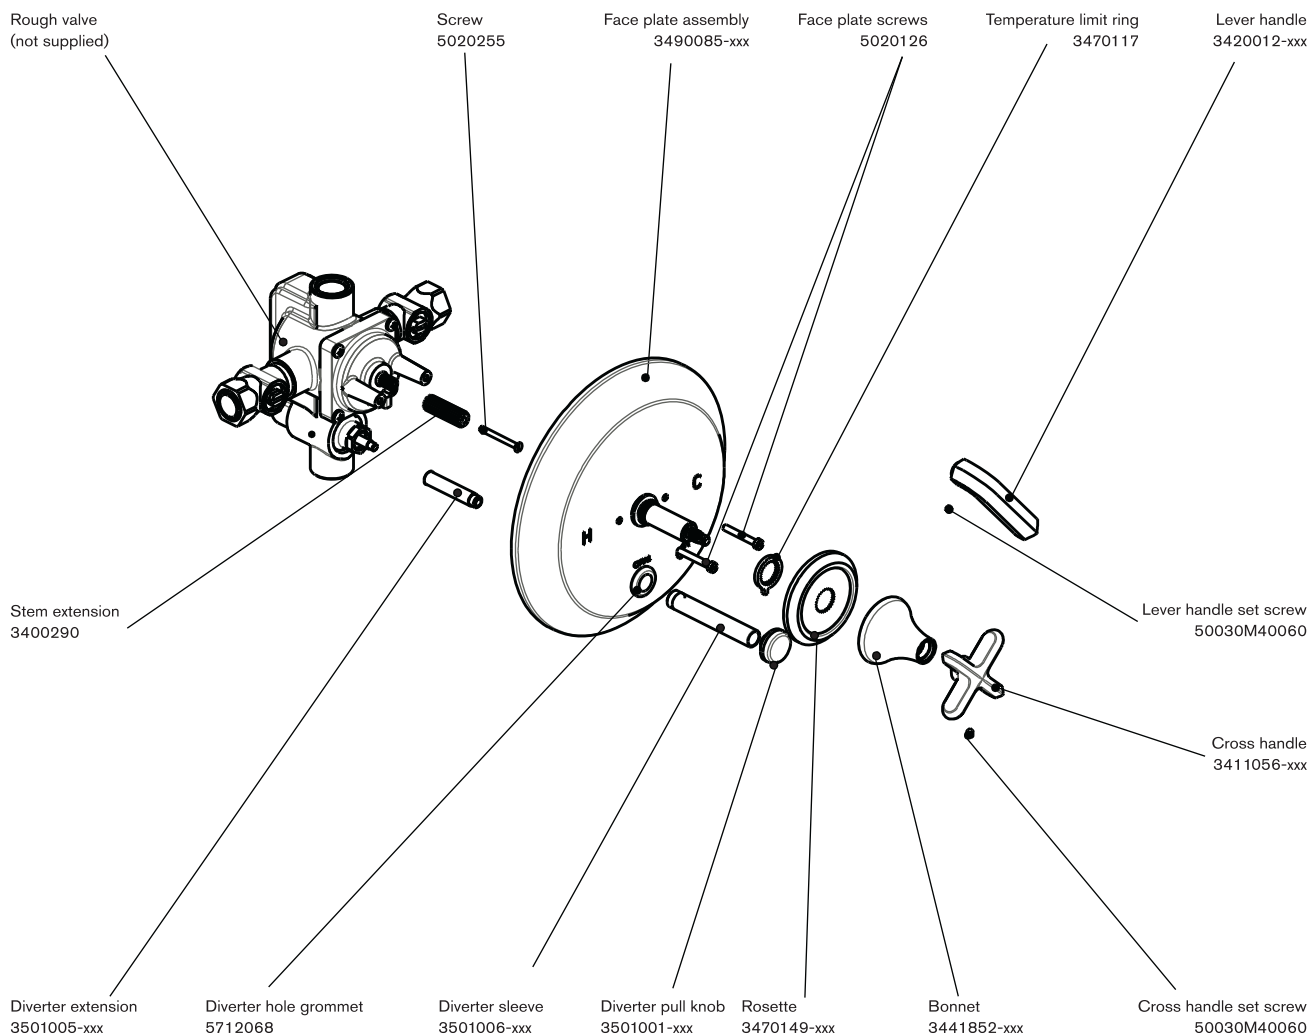

Assembly instructions

- 1] Place stem extension onto valve stem using screw.
- 2] Insert upper link for diverter / diverter extension into body valve diverter spindle.
- 3] Thread diverter sleeve into pressure balance rough valve.
- 4] Slide face plate assembly into place and engage stem extension using face plate screws.
- 5] Set high temperature limit stop by turning handle drive shaft counter clockwise until desired maximum temperature is reached. Place temperature limit ring onto handle drive shaft with arm set next to limit stop pin. Turn handle drive shaft clockwise to shut off valve.
- 6] Place rosette onto handle drive shaft and align mark with OFF position. Thread bonnet into drive shaft.
- 7] Align lever handle with OFF position and tight with set screw.
- 8] Thread diverter pull knob into diverter extension.



www.cifial.pt | cifial@cifial.pt
cifial@cifial.es
www.cifial.co.uk | sales@cifial.co.uk
www.cifialusa.com
www.cifial.pl | cifial@cifial.pl

5663630
983HX001W03