
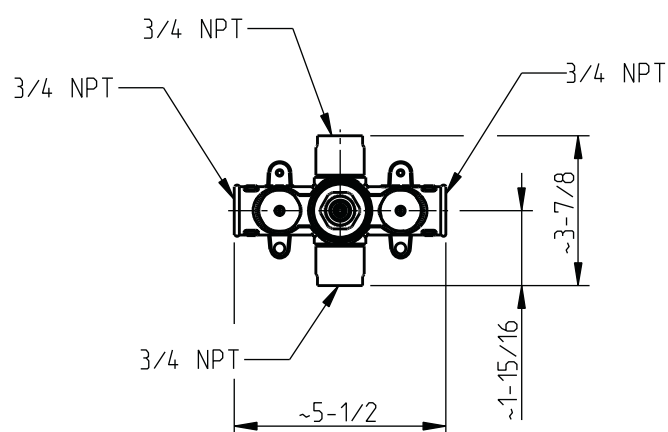


TECHNO 465

Concealed thermostatic valve 1 hole

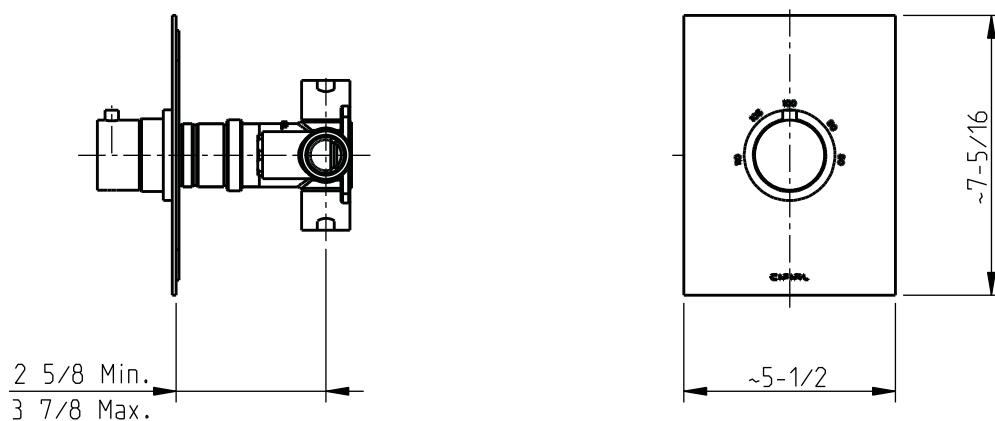

dimensions in inches


Installer: Please leave all leaflets with the building owner to file for future reference.



Installation Instructions

Installer: xxx represents different finishes

cod.: 221.616.XXX

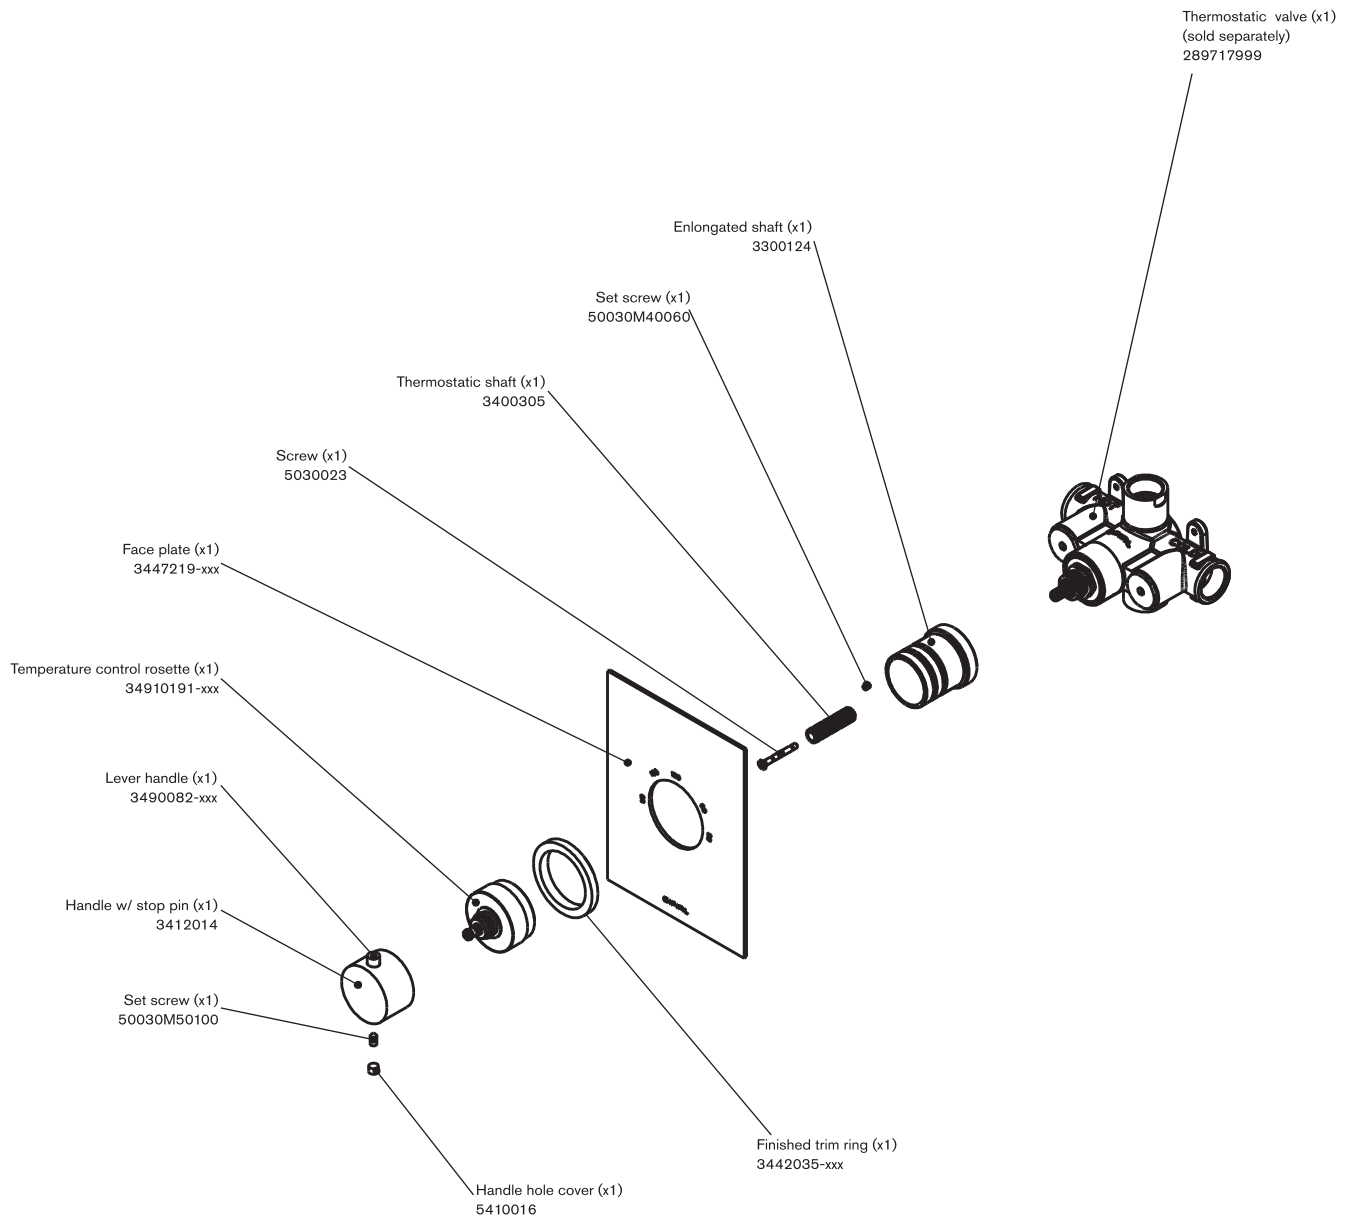


Installer: Please leave all leaflets with the building owner to file for future reference.

Installation Instructions

Installer: xxx represents different finishes

cod.: 221.616.XXX

EN

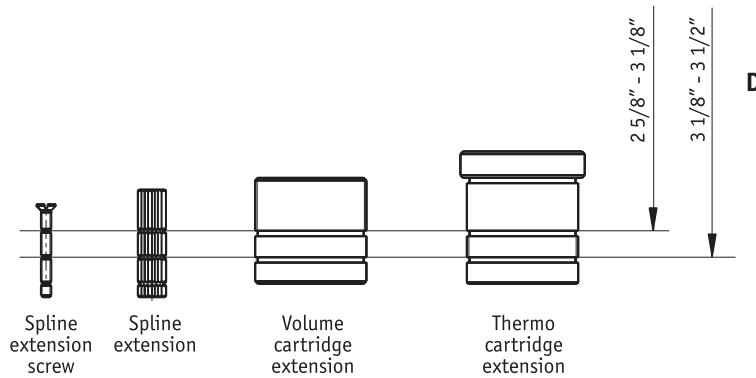

installation


Before the trim installation, confirm the valve depth to the finished wall surface (dimension D on previous page drawing). If the valve depth fall in the range $3 \frac{1}{2}'' - 3 \frac{7}{8}''$, install all the components as supplied. If not, the bellow components must be cutted, according to the actual valve depth (the components are grooved for that purpose).

operation

The upper handle turns on and off the water and controls the flow rate.
The lower handle controls only the mixed water temperature. The confort zone is in the range from 90°F to 100°F, but total range is 80°F to 110°F.
Protection against scalding stops the rotation of the handle at 100°F. If water above 100°F is desired, press on the button and turn the knob counterclockwise, to prevent scalding, ensure that the handle is left in a previous position (= or <100°F).

thermostatic valve regulation (only when needed)


2. Red mark aligned to the mark 100°F

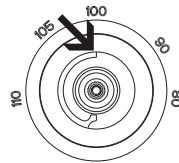

- 3.



4. Anti-scalding button

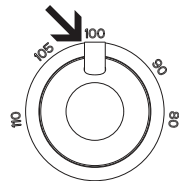

1. Remove the thermostatic handle control.
2. Confirm if the temperature limit stop on the spindle present its red mark coincident with the mark 100°F on the back plate; if not amend position.
3. Open the flow control valve, let the water run, and check by a thermometer the actual temperature delivered by the valve.
It is advisable that you choose a temperature of 100°F when resetting the calibration. To accomplish that, rotate the spindle counterclockwise to increase the temperature or vice-versa. To rotate the spindle, you can use the thermostatic handle control while depressing the button, if necessary.
4. Achieving the temperature of 100°F, apply the handle aligning the button with the mark 100°F.
5. Valve setting is now calibrated according to your own operating conditions.
6. Secure the thermostatic handle control with the grub screw.

note: It's recommended that you rotate the thermostatic control handle between the maximum and minimum limits, by pressing security button, and with the water running. This way you prevent limestone incrustation, that could block up the thermostatic cartridge.

Installer: Please leave all leaflets with the building owner to file for future reference.